

TIRE REPAIR KITS



Plug & Pump Kit

160-1062

- No need to dismantle from rim.
- Features the Engine-Air System that needs no replacement parts.

Kit contains:

- Engine air Tire Pump 48" (107cm) Hose
- Engine air Fresh Air Valve & Adapters 18mm, 14mm, 12mm, 10mm
- Tube of Rubber Cement, .41 fl.oz.
- Compact Vinyl Pouch
- Thumb Buffer / Insertion Tool
- Four 2" long (50.8mm) Round "On the Wheel" Temporary Insertion Strips & full instructions.



Deluxe Tube & Tubeless Repair Kit

160-1035

Kit Contains:

- Two 9 1/2" (240mm) Steel Tire Levers
- Engine air Tire Pump 48" (107cm) Hose
- Engine air Fresh Air Valve & Adapters 18mm, 14mm, 12mm, 10mm
- Buffer/Stitcher Tool / Tube of Rubber Cement .41 fl.oz.
- Valve Cap with Core Remover / Reamer/Probe Tool
- Hand Cleaner & Paper Towel
- Three 1 1/4"(31.75mm) Round Patches , Two— 2"(50.8mm) Round Patches
- One 1 5/8 x 3"(41.28x76.2mm) Oblong Patch
- Three 2" long(50.8mm) Round "On the Wheel" Insertion Strips
- Three Permanent Repair Plugs 1 3/4" (38.1mm).
- Round Patch Head with a 1/4"(6.35mm) Rubber Sealing Stem.
- Heavy Duty Black Vinyl Zippered Pouch, Full Instructions.



Tubeless Tire Repair Kits

160-360

- Contains: 1 reamer
- 4 rubber sticks
- 2 tubes cement



Cold Patch Repair Kit

160-305

- For repairing tubes or other rubber goods, no heat or flame required.



Replacement Plugs

160-360-1

- For 160-360 Above
- Plugs only - 5 per package



Mini Tire Repair Kit

160-361

- Contains: 1 reamer
- 3 rubber sticks
- 1 tube cement